



82—630 Removal and installation of wiper linkage

Removal

- 1 Remove wiper arms (82—610).
- 2 Remove wiper motor (82—680).
- 3 Unscrew fastening screws (1) of lefthand bearing shaft and remove shaft in downward direction.

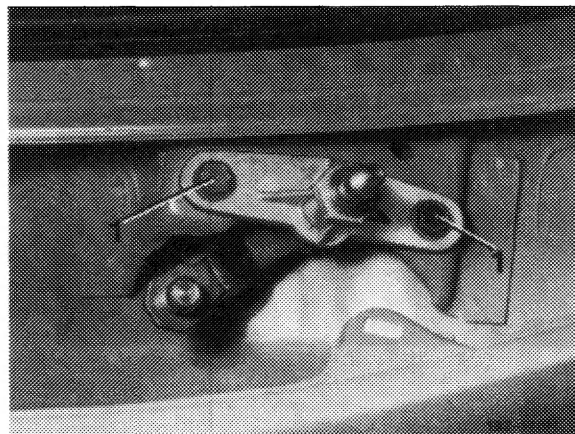

- 4 Unscrew fastening screws (1) of righthand bearing shaft and remove shaft in downward direction.

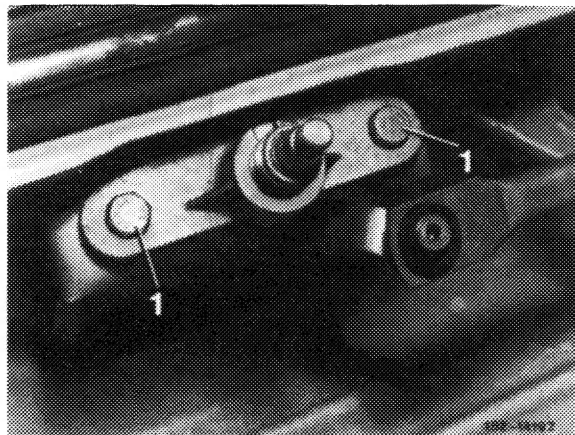

Installation

- 5 For installation proceed vice versa.